



You can:

a) Original Setting

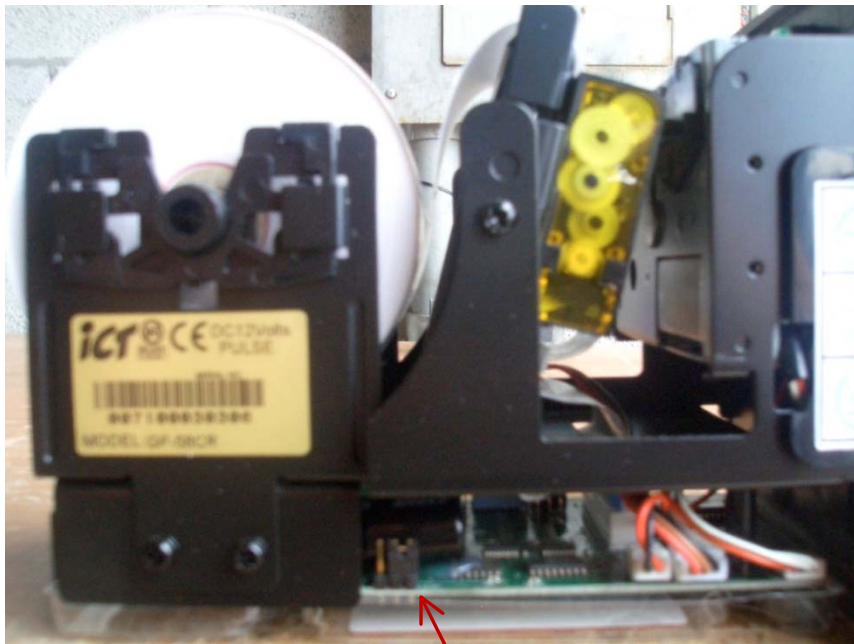


b) Changed

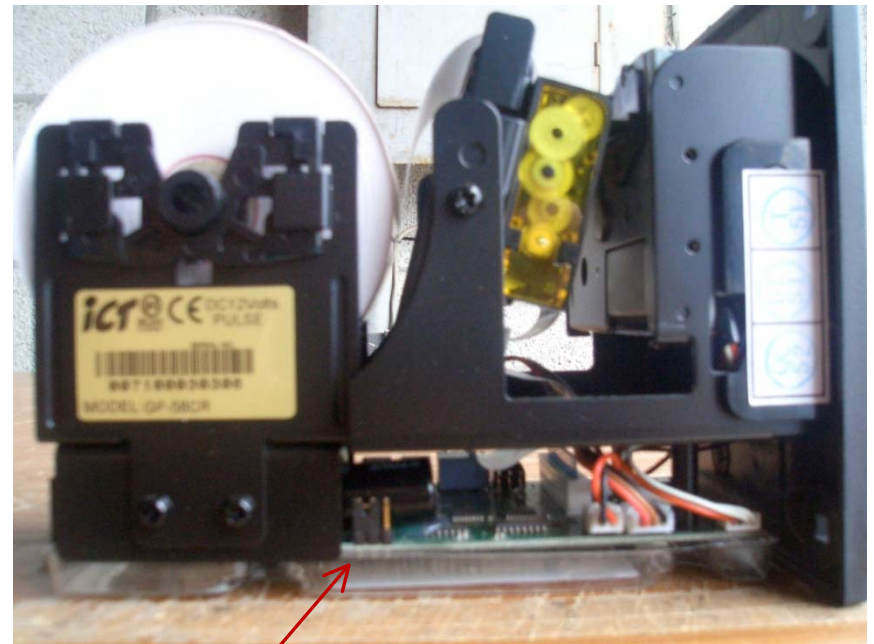

Locate this jumper in the side of the printer, and change it.

a) Original Connector

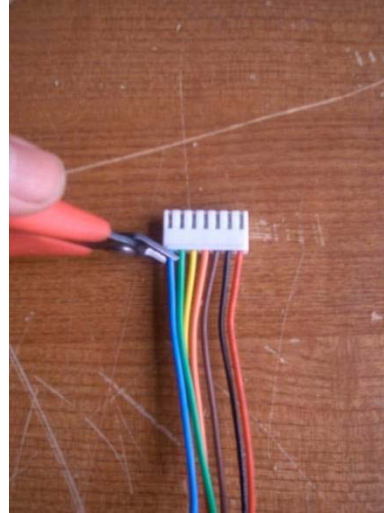

b) If you want, cut this cables:


Blue

Green

Orange

Brown

Not Used.

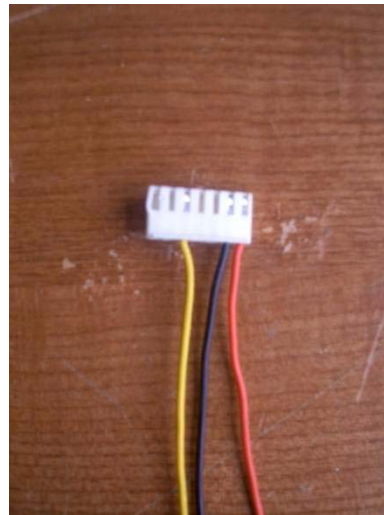


c) You Only need:

Yellow: Payout Trigger

Black: GND (Ground)

Red: +12volts



In the countertop, with the back door open, do this connections:

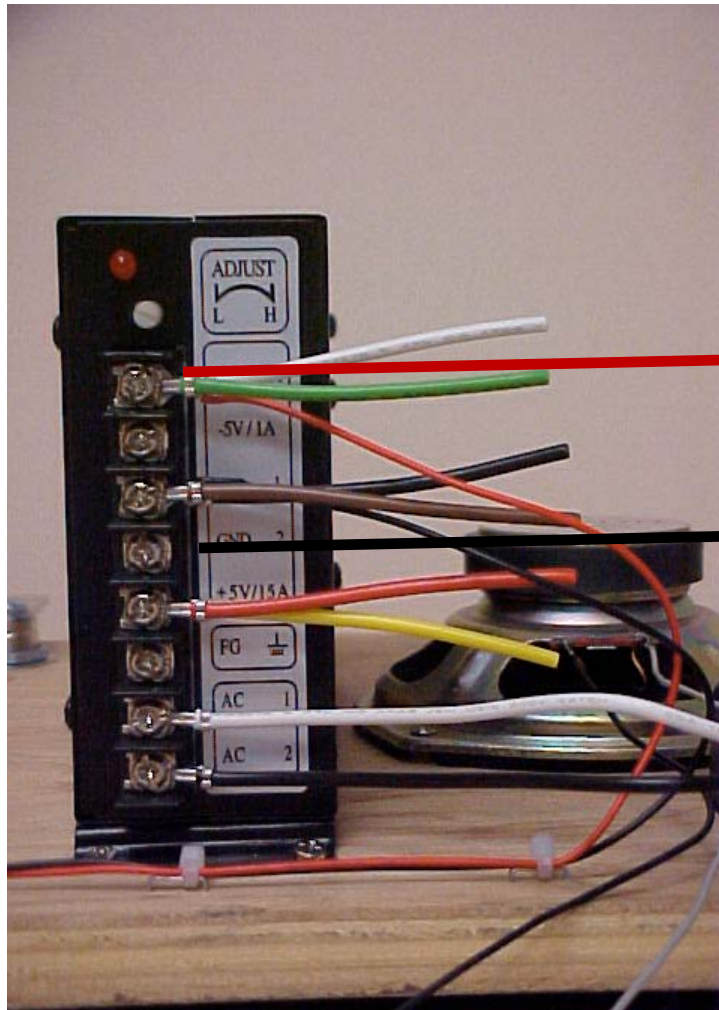

Red: +12volts


Black: GND (Ground)

Take the yellow cable to the front of the machine:

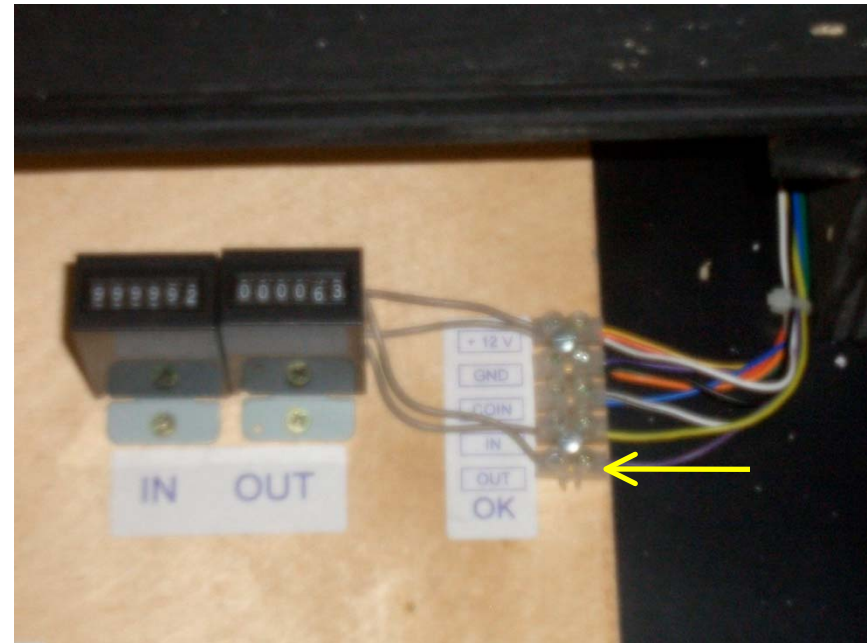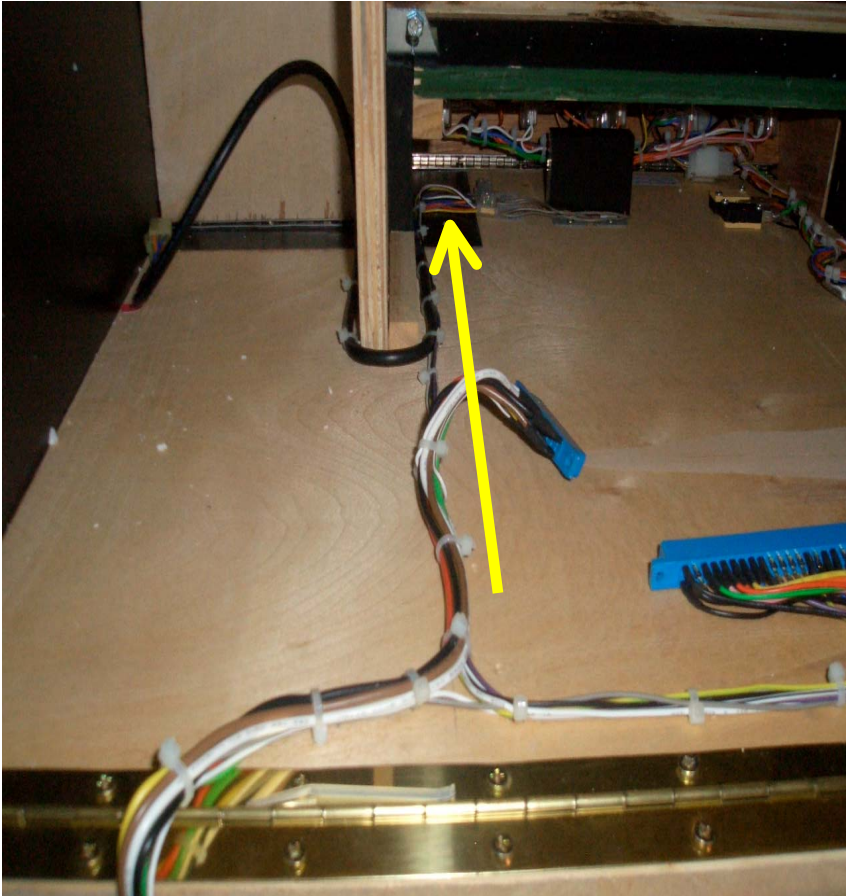

Connect this yellow cable with the violet cable

Or, you can made all the connections in the front:

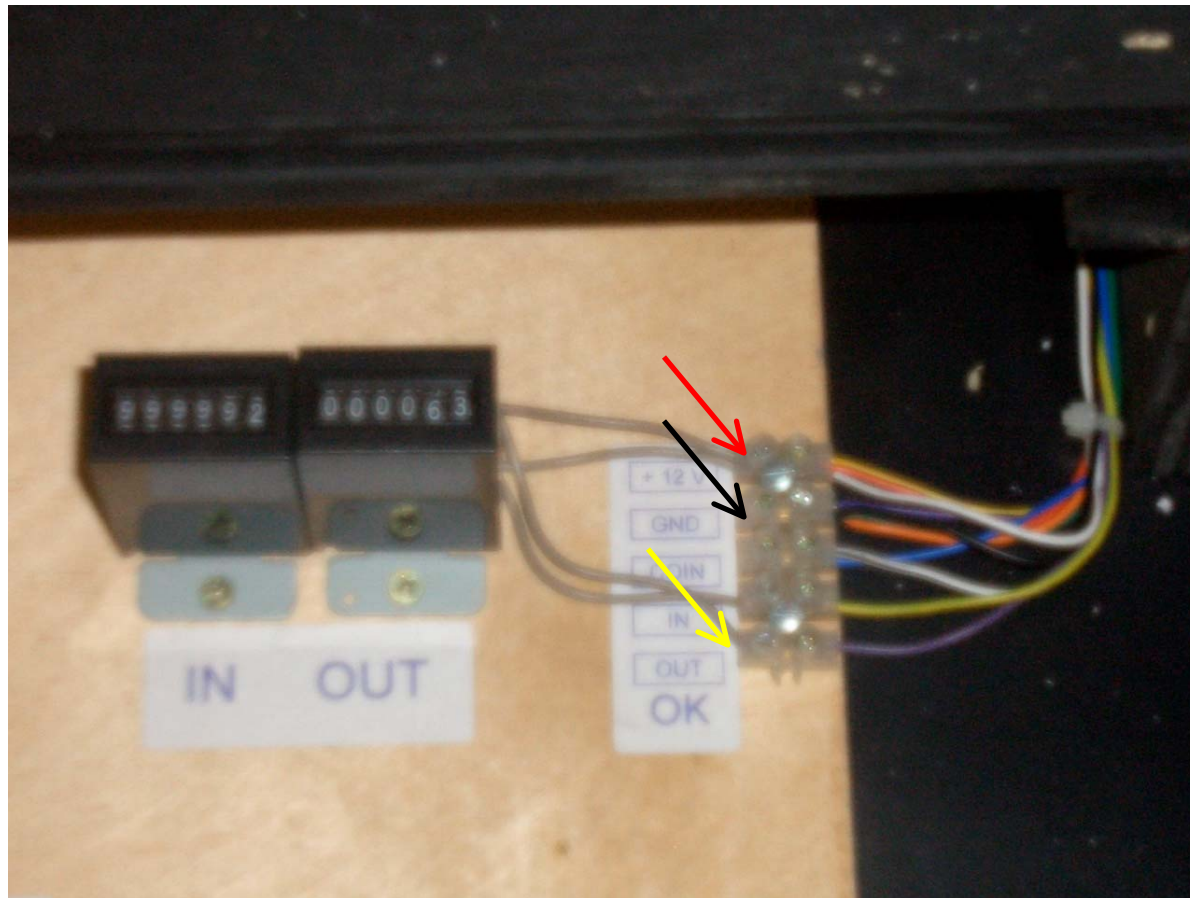

- Red: +12volts
- Black: GND
- Yellow: Data Payout